

XMAX ACE

OPERATION GUIDE

1.LOAD

Remove the ceramic mouthpiece. Loosely fill the oven with botanical material. All material should be inside the ceramic oven.

Load wax cup first for concentrate use. Do NOT load too much wax one time.

Note that the tighter the oven is packed the more draw resistance will be experienced.



2.POWER ON/OFF

Click Power Button 3 times, the Ace will power on and begin to heat up under the default settings or your last setting temperature.

Click the Power Button 3 times to turn off, and the XMAX Ace will vibrates to indicate off.




3. ENJOY XMAX ACE

While heating, the OLED display temperature will go up. The device vibration indicates readiness and the timer countdown starts.

Inhale through the mouthpiece and enjoy.

This device will automatically begin vaping that removes the need for power/push button vape.

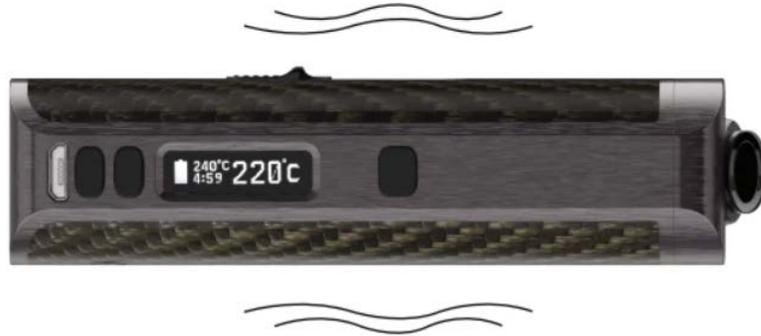


4. TEMPERATURE SETTINGS

Press the Up Button to increase temperature, press the Down Button to decrease temperature. Click to change by degree, hold to change quickly.




5. BOOST MODE

Press the Power Button twice to enter boost mode, the device temperature will go up to 255°C(491°F) directly with real quick, press the Power Button twice to exist boost mode.

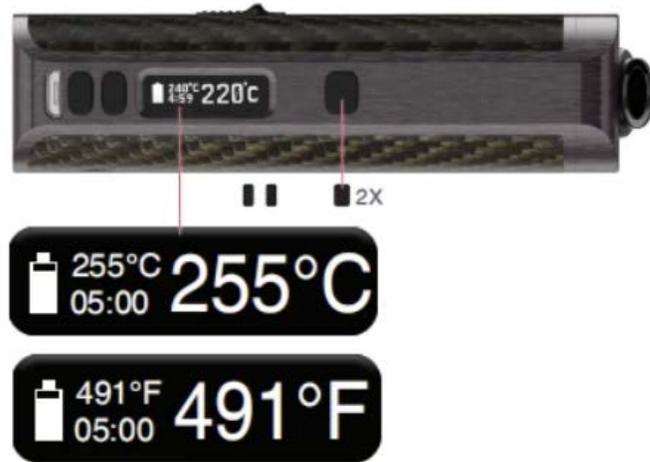


6. TIMER SWITCHOVER

The Ace has 2 session timers, 5 minutes and 10 minutes. To switch over the 5 minutes and 10 minutes, just hold the Power Button and UP Button at the same time for 3 seconds.

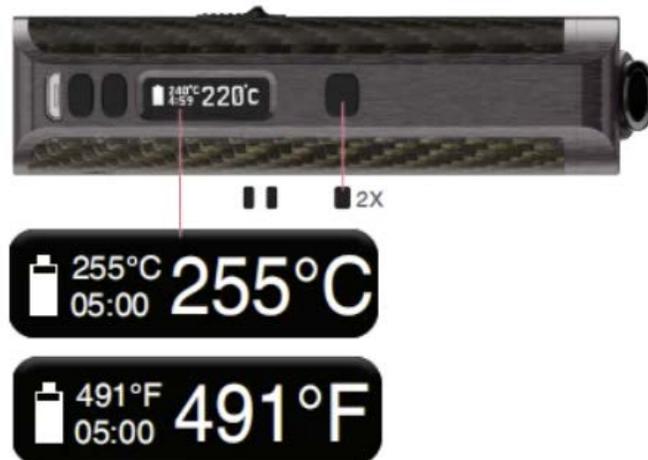


7.FAHRENHEIT AND CELSIUS SWITCHOVER

To switchover to Fahrenheit, just hold the Power Button and Down Button at the same time for 3 seconds.

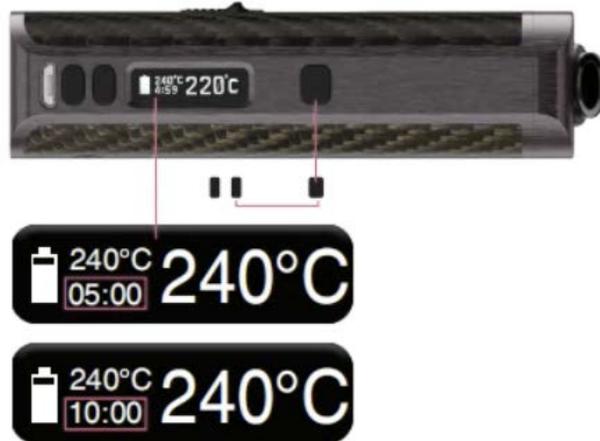

8.OLED DISPLAY

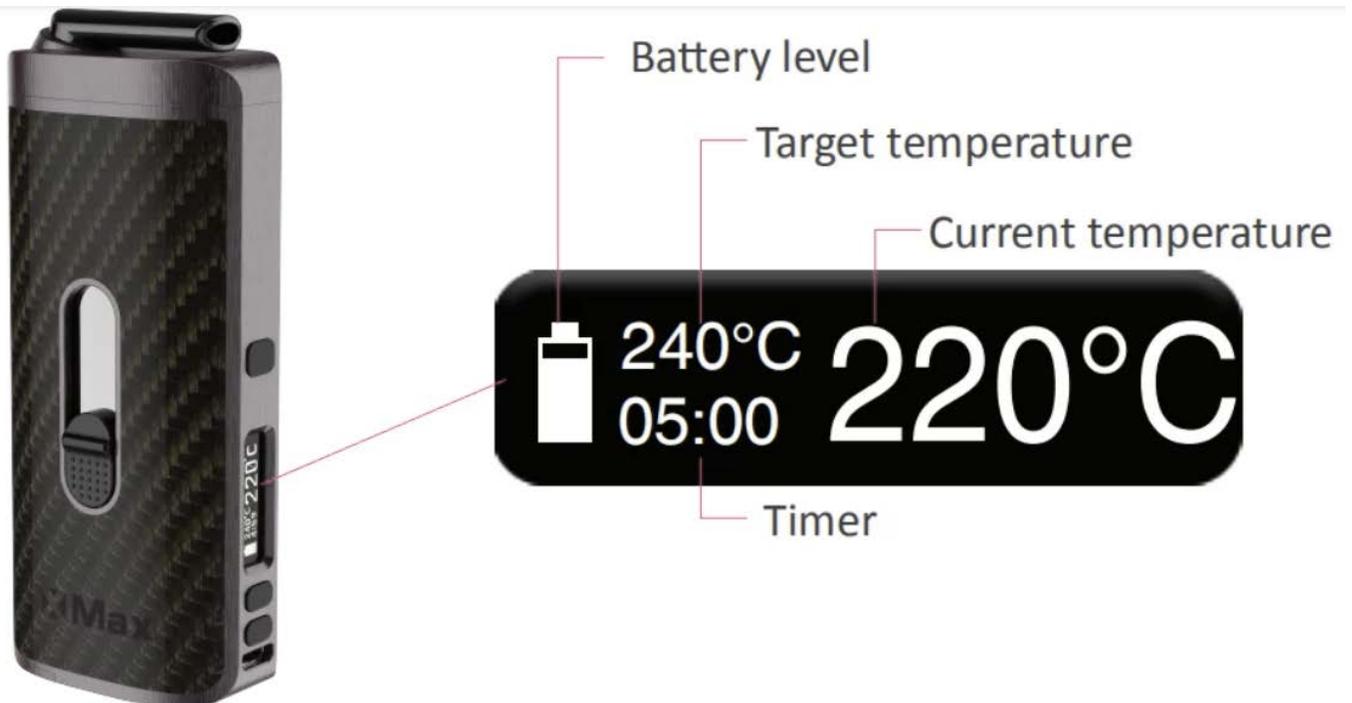

9.CHARGING

AROUND



Low power

If battery level is low, the display screen will show "LOW VOLTAGE". You can use provided micro USB cable to charge.

After charging, allow the device to cool down before storage.

10.CERAMIC OVEN CLEANING

Slide the cleaning button to push the material out. Use brush and alcohol cotton swab to sweep inside of oven.

*Tip: Perform a burnoff cycle at max temp for 2 minutes after cleaning.



11. MOUTHPIECE & FILTER CLEANING

Use brush to clean the mouthpiece tip.

Take off the silicon holder; then you can clean the ceramic filter and mesh screen, please wipe and clean with alcohol wipes and cotton swabs.

Take off the mouthpiece tip, and replace with a new o-ring..





EST. 2016

CANATURA

HEMP  LIFE

Canatura - Online store with the best
hemp products for your health

www.canatura.com/en

Copyright reserved